


# EXPLODED DIAGRAM AND PARTS LIST

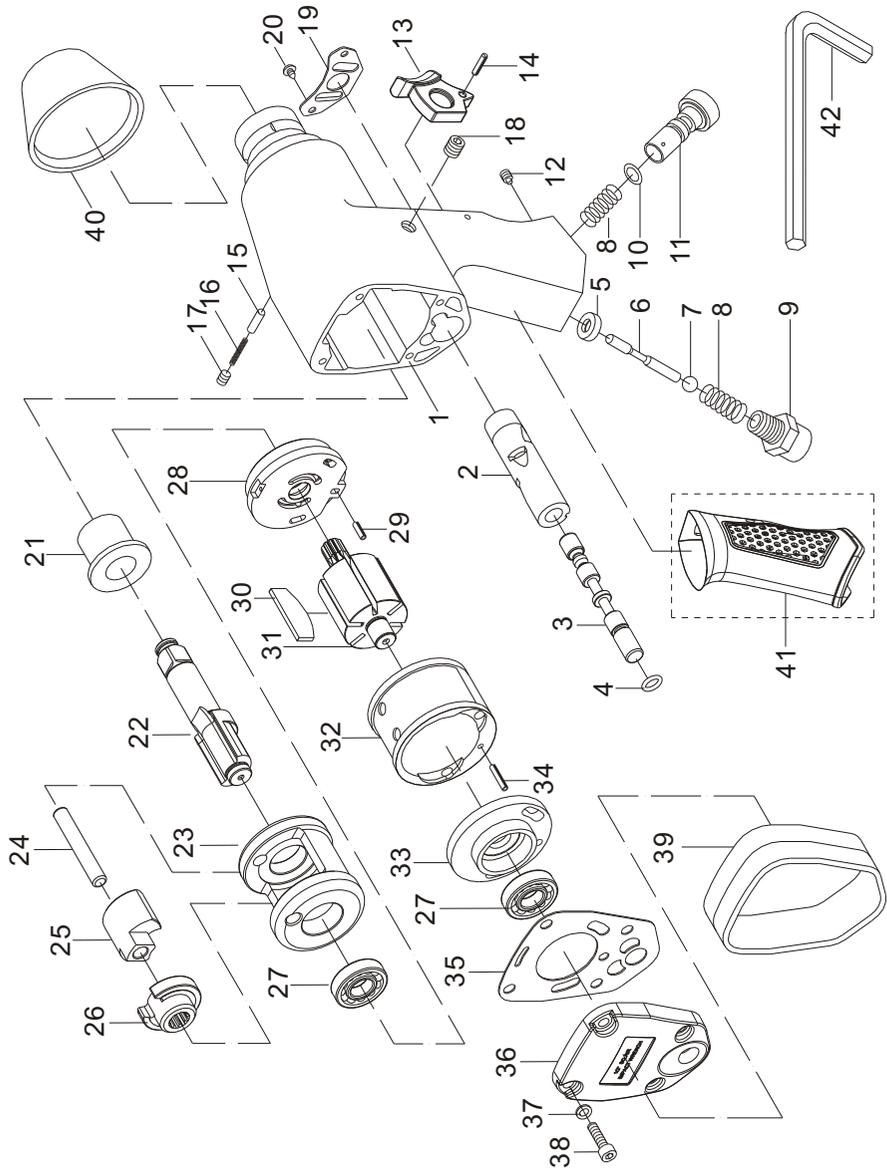

Part No.	Description	Quantity
01	Housing	1
02	Valve sleeve	1
03	F/R valve stem	1
04	O-ring	1
05	Gasket	1
06	Bolt	1
07	Steel ball	1
08	Spring	2
09	Inlet nipple	1
10	O-ring	1
11	Air flow regulator	1
12	Screw	1
13	Trigger	1
14	Trigger bolt	1
15	Bolt	1
16	Spring	1
17	Screw	1
18	Screw	1
19	Muffler	1
20	Screw	2
21	Axle sleeve	1

Part No.	Description	Quantity
22	Anvil	1
23	Hammer cage	1
24	Hammer pin	1
25	Hammer dog	1
26	Drive cam	1
27	Bearing	2
28	Front plate	1
29	Fxing pin	1
30	Rotor blade	6
31	Rotor	1
32	Cylinder	1
33	Rear plate	1
34	Fxing pin	1
35	Gasket	1
36	Rear cover	1
37	Cushion	4
38	Cap screw	4
39	Back rubber scuff	1
40	Front rubber scuff	1
41	Soft grip	1
42	Hex key	1

- Contact the distributor or sales agent from whom you purchase the tool for spare parts ordering for any necessary replacement to get continuous use of tool and for extending the tool life.
- When ordering spare parts and components, give each part number and order quantity.

Thank you.